






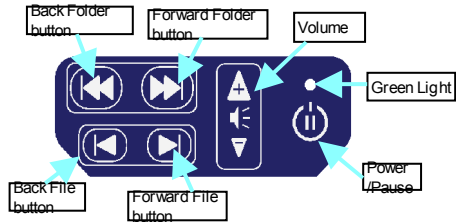

Introduction to the Saber hand wind player

The Saber player is an MP3/WMA player with amplifier and speaker. The internal battery can be recharged by turning the handle, or by plugging in an external power source such as a solar panel or power pack. The player is operated from the keypad.



Power /Pause		<p>Before turning on the machine, first turn the handle clockwise for 30 seconds. Then press and hold this button until the green light flashes. (It will take 6-20 seconds to power on.) Continue to turn the handle until the machine starts to play.</p> <p>To pause during play press this button once. The green light will flash slowly. To resume play press this button once again..</p> <p>To turn off the machine, press and hold this button until the green light turns off.</p>
Forward File		<p>Press once to go on to the next file, which may represent an individual message, chapter or song.</p> <p>Press and hold to go fast forward (cue).</p>
Back File		<p>Press once to go back to the previous file, which may represent an individual message, chapter or song.</p> <p>Press and hold to rewind (review).</p>
Forward Folder		<p>Press once to go on to the next folder, which may represent a whole program, book or album.</p> <p>Press and hold to go to the last folder.</p>
Back Folder		<p>Press once to go back to the previous folder, which may represent a whole program, book or album.</p> <p>Press and hold to go to the first folder.</p>
Volume		<p>Press the top button (+) to make the sound louder.</p> <p>Press the bottom button (-) to make the sound softer.</p>
Internal Battery		<p>When the built-in battery is nearly flat, the red light will start flashing.</p> <p>To charge the battery</p> <ul style="list-style-type: none"> • Turn the crank handle in a clockwise direction, OR • Optionally connect a 7.2V 500mA AC adapter or solar panel. (The DC socket is 2.1mm, centre pin positive.) <p>When the unit is charging, the red light will be on. When the unit is fully charged the red light will turn off, and you can remove the power supply.</p>

Documentation and Software

The Saber's on board memory contains documentation and software on various aspects of the player's operation. Connect the Saber to a computer using a USB cable to view the documents and run the utility setup program.

Saber_Introduction.pdf	Getting started with the Saber, and introduction to the Saber's inclusions and optional accessories.
Saber_User_Guide.pdf	More detailed information about use and care of the Saber, and how to load content onto the player.
Saber_Maintenance_Guide.pdf	Technical specifications, procedures for disassembly and reassembly, and troubleshooting.
SaberCopySetup.exe	Installs the Saber Copy Utility and all documentation onto your PC. Supports Windows 2000, XP and Vista.

The latest versions can also be downloaded from www.globalrecordings.net/saber

Optional Accessories

Battery Holder	Holds 4 "D" cells to power the Saber and recharge the internal battery.
AC Adapter	Includes interchangeable power sockets to suit most countries. (Available late 2008)
Solar Panel	Includes it's own rechargeable battery, so the panel can be charged from sunlight during the day, and then recharge the Saber at night. (Available late 2008)
2GB SD Memory card	Doubles the Saber's playing capacity, and allows content to be easily exchanged.
Lock Pack	Includes tamper-proof screws to hinder the opening of the case, and special locked firmware to prevent change of content through the USB port or SD memory card.
Maintenance Pack	Contains replacement belts, screws, side covers and other replacement parts, plus documentation and software.
Copy Pack	Contains a USB hub, cables and software to facilitate copying of audio files to up to 7 Sabers at once.

Contact Information

To obtain support or order accessories, contact GRN in Australia or your nearest centre:

Global Recordings Network Australia
Locked Bag 9019, Castle Hill NSW 1765
AUSTRALIA

Phone: +61 2 9899 2211
Fax: +61 2 9899 2602
Email: au@globalrecordings.net

For a list of other centres see www.globalrecordings.net/contact